


SPERA™ System Configuration

NFU-7000 / NFU-7000-L

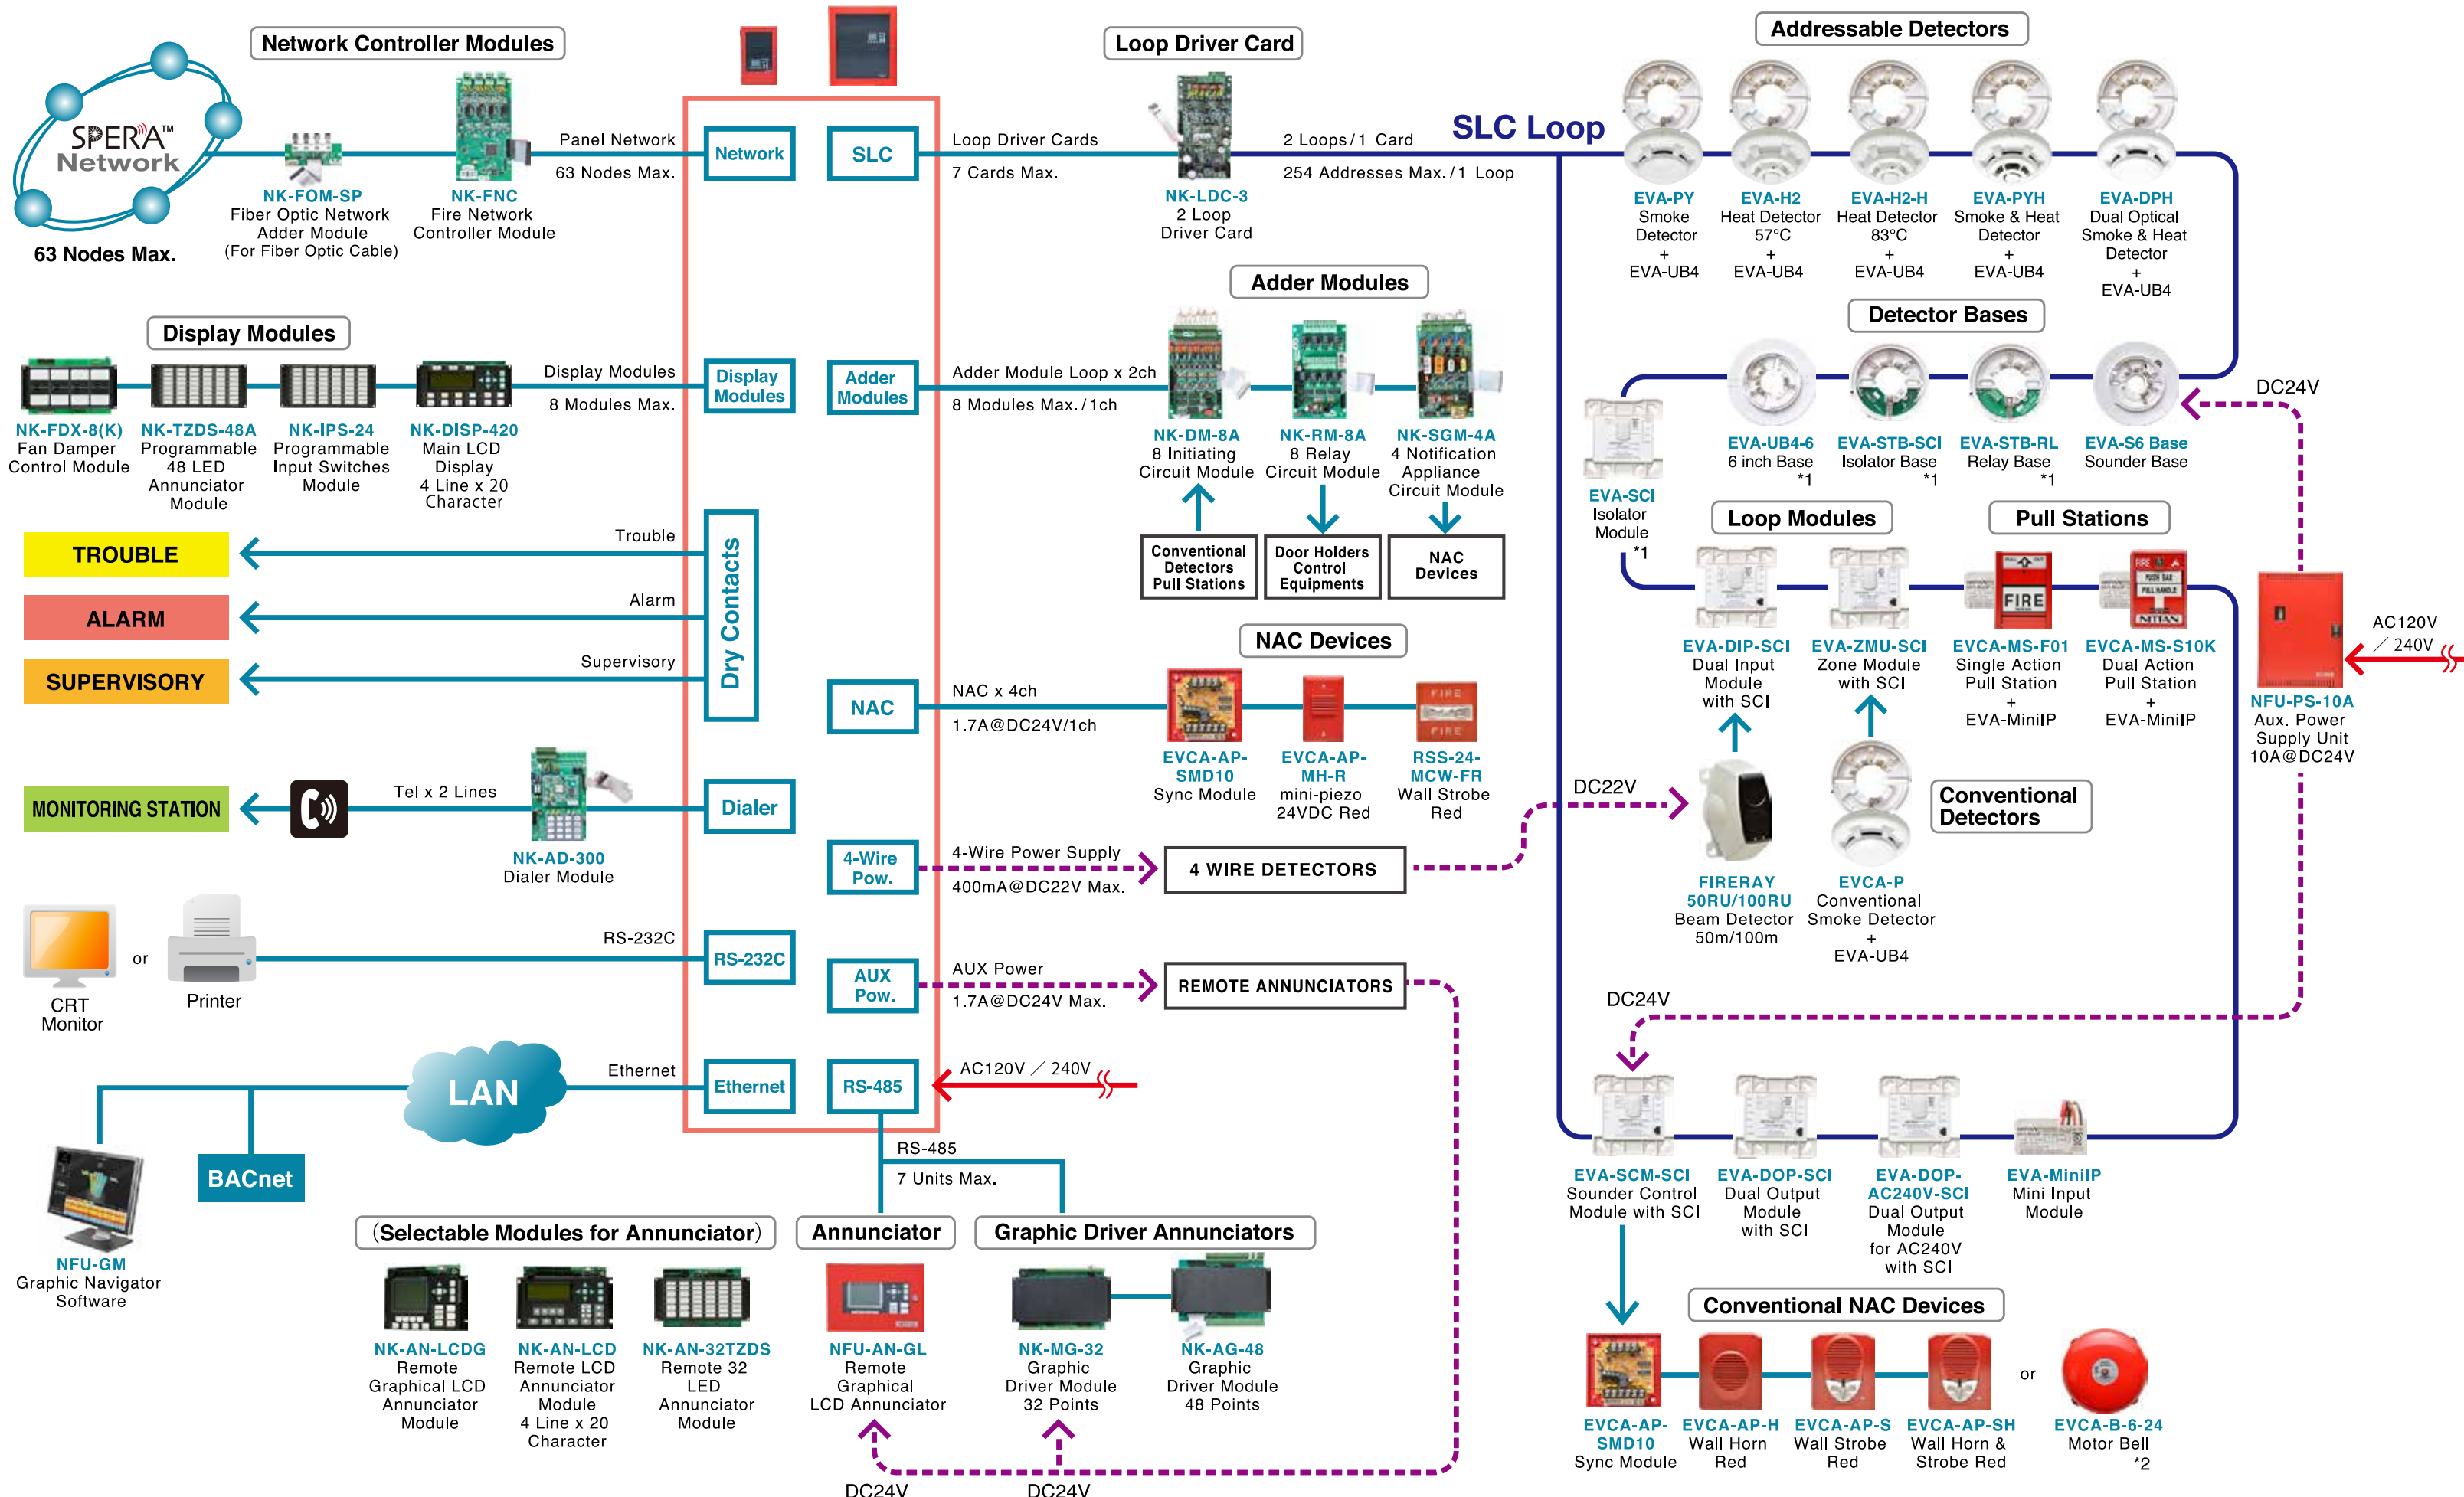

*1 These loop devices do not expend the loop addresses.
 *2 Bells should not be mixed with other NAC devices on the same line.